



User_manual_for_machine_inverter.pdf - Adobe Acrobat Reader DC

File Edit View Window Help

Home Tools User_manual_for_m... X

12 / 68 180%

Share

P、N	Connecting terminal of external braking bank.	
E	Ground terminal: the third method of grounding for 220V and special grounding for 380 V of Electrical Engineering Regulations.	

4) Function Description of Control Circuit Terminals

Symbol	Function Description	Factory setting
FOR	Multi-Input 1	Forward run
REV	Multi-Input 2	Reverse run
RST	Multi-Input 3	Reset
SPH	Multi-Input 4	High speed
SPM	Multi-Input 5	Middle Speed
SPL	Multi-Input 6	Low Speed
DCM	Common Terminal of Digital and Control Signals, +12v Power, (EV、IPV、P24) Ground	
EV (IPV)	+12V Power Supply	Max. output current 200mA
P24	+12V Power Supply	Max. output current 200mA
+10	Power Supply for Speed Setting	+10V

Export PDF
Create PDF
Edit PDF
Comment
Combine Files
Organize Pages
Redact
Protect
Optimize PDF
Fill & Sign
Adobe Sign
Send for Review
More Tools

Convert and edit PDFs with Acrobat Pro DC
Start Free Trial

Taper ici pour rechercher

14:39 24/01/2019